

PRODUCT SIZE	1500*239*60MM
MAX SLIDING LENGHT	1350 MM
MAX LOADING WEIGHT	1,5 KG
MATERIAL	ALU / CARBON
BATTERY CAPACITY	12V - 1800MAH
NET WEIGHT	2,58 KG


ACCURIZE MOVING SLIDER

User Manual

WWW.ACCURIZETARGET.COM



User Manual Accurize Moving Slider

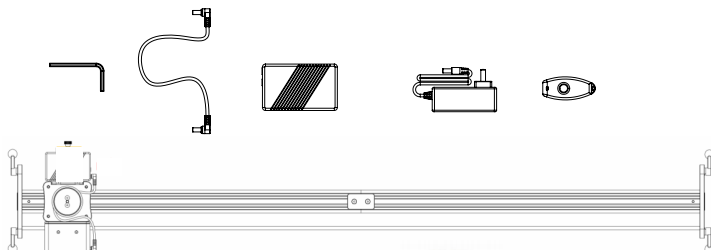

PACKING LIST

- Moving Slider
- Connecting cable
- Remote controller
- Lithium battery 12V -- 1800mAh
- Battery-charger 220V
- Umbraco key
- Holder for target

BATTERY CHARGE

Charge the battery to full before using the slider

- Connect the charger to the battery, use the second hole from the switch
 - Connect the charger to the main power
 - Turn the battery switch in position on
- 220V battery charger shows red lamp – Full charged battery, lamp turn green.
Battery will work for approx. 1 - 1,5 hours.

CONNECTION

- Fasten the battery to the carrier
- Connect battery and Slider motor with the connecting cable. Use the hole closest to the switch of the battery.

STEP 1.

Get ready to use the Slider

Set the battery button in "on" position. Reset the Slider by longpress button "A" about 3 seconds, the carriage will slide to the left. When the carriage will arrive at the left end it will make a clicking noise. This time, press button "A" and the noise will stop.

STEP 2

Single press button "A", the carriage will move from A to B, or B to A. (The carriage will stop on the left or the right end)

STEP 3

Double press button "A", the carriage will move from A to B, or B to A, and will keep moving on from side to side until you double press again button "A" to stop.

STEP 4

During moving, single press button "B" to adjust the moving speed.
25% - 50% - 75% - 100% - 25% - One click for each speed level.

STEP 5

If problems repeat step 1.